

#### **AK/HA Mfg. LLC** P.O. Box 640 Plymouth, IN. 46563-0640

Phone (574)-936-2542 Fax (574)-936-2298

# The "UV Disinfector" Installation, Operation and Maintenance Instructions

#### **System Description:**

The UV system disinfects the effluent by exposing it to a powerful ultraviolet light in a confined space. A flow restrictor ensures that the effluent is exposed to the UV light for a sufficient period of time to complete the disinfection process. A control panel is provided that supplies power to the UV system and has an audible and visible alarm that activates if the bulb fails of the UV current drops below a minimum level. The control panel is housed in a weather proof enclosure and has separate circuit breakers for the UV system and the alarm system.

#### **Specifications:**

UV Bulb: Length = 37-7/32"

Lamp Watts = 37 Watts

UV Output = 12.8 Watts

Radiant Intensity at 1 meter = 112 microwatts

Control Panel: Model 50-20-UV

**Caution:** During installation and servicing make sure that power is disconnected from the system anytime the UV bulb is exposed. The majority of the energy emitted by the bulb is invisible and is powerful enough to burn eyes and skin in a very short exposure time. Ensure that during installation and service that no fingerprints or oily materials are left on the bulb. If necessary, the bulb can be cleaned with a soft cotton cloth soaked with alcohol.

#### **Installation:**

Mount the UV unit as close to the pump tank as possible (or inside the pump tank or ATU). It is advisable to remove the UV lamp before installing this unit. The unit shall be installed in a vertical position. Make sure the outlet connection is level to the inlet side.

The riser shall be at ground level when the unit is completely backfilled. Cut off the bottom end of the 6" riser making sure not to cut the end with electrical penetration. After cutting the end off, glue in place. Do not glue cap. The electrical connector in the 6" x 4" reducer should not be flooded.

#### **Electrical:**

Mount the electrical box provided by the manufacturer as close to the UV unit as possible. Pull the open end of the 40 feet direct burial wire through the hole in the side of the 6" riser (top of UV unit). Do not add more wire to this 50 feet. Bury the wire underground from the unit to the electrical control panel, cut to length. Connections are watertight including the electrical penetrations though the 6" riser.

#### **Operation:**


The system will operate continuously without intervention other than scheduled maintenance. If the alarm activates, the homeowner should contact their service provider.

#### Maintenance:

When doing maintenance or inspection (every six months) remove cap, unplug and slowly lift lamp out fo the unit by pulling straight up on electrical cord. Carefully wipe clean the quartz crystal, then gently slide the lamp back into the unit until the top seal on the lamp is next to the 7/8" hole. Plug lamp back together and replace cap. Every two years replace complete lamp. It comes with the quartz crystal and lamp in place. Just remove as above, and replace. When inspecting, check for settlement in bottom of unit and flush with water hose if necessary.

#### Warranty:

UV "The Disinfector", Inc. warrants the UV products to be free from defects in materials and workmanship when exposed to normal use and service, provided proper assembly, installation and use procedures are followed. UV "The Disinfector", Inc. is limited in liability to the cost of any product or part in accordance with the warranty, and UV "The Disinfector", Inc. shall in no event be otherwise liable or be liable for indirect or consequential damages, loss of use or loss of profits. UV "The Disinfector", Inc. shall not be responsible for work done or expenses incurred in connection with original installation of product, or parts thereof, shall not be responsible for work done or expenses incurred in connection with original installation of product or with the repair or replacement of suck product, or parts thereof, and shall not be responsible for labor charges involved in replacing any defective part, except on the authority from UV "The Disinfector", Inc. The UV lamp supplied with this unit is warranted for a twelve month period from the date of installation. This warranty is under the same conditions as above stated. By adding to the 40 ft. of wire or flooding the system into the 6" riser VOIDS any warranty on this unit.

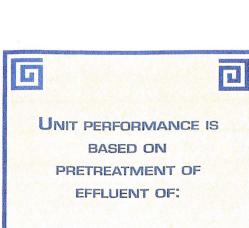


CBOD COUNT OF LESS THAN 10 MG/L AND TSS COUNT OF LESS THAN 10 MG/L

WATER TEMPERATURE
RANGE:
34 DEGREE TO 100
DEGREE F.

THIS UNIT IS DESIGNED FOR GRAVITY FORCE TO PUMP TANK OR DRAIN FIELD

 6 GPM FLOW RATE 115 VOLT 60 HZ POWER







THIS WASTEWATER
DISINFECTOR
EMPLOYS A GENUINE
STER-L-RAY<sup>TM</sup> BY
ATLANTIC ULTRAVIOLET
GERMICIDAL LAMP THAT
AFFORDS THE MAXIMUM
EFFICIENCY AND
LONGEVITY IN PRODUCING
THE REQUIRED
GERMICIDAL RAYS.

MANUFACTURED BY:

UV "The Disinfector," Inc.


PO BOX 203

PUYALLUP, WA 98371

### 1.877.770.1500

WEBPAGE
WWW.ONSITEWTC.COM
E-MAIL
ONSITEWTC@AOL.COM

DISTRIBUTED BY:

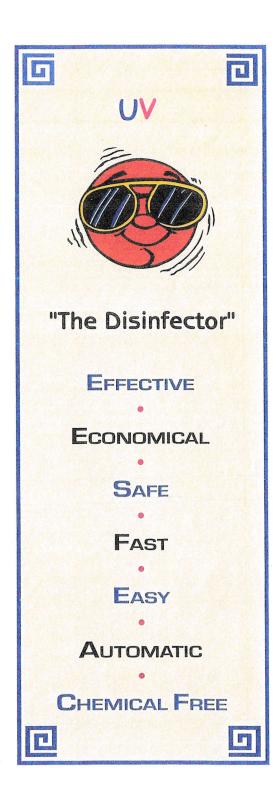

#### DIRECT BURIAL

## MEETS PUBLIC HEALTH STANDARD

**DISPOSABLE INSERT** 

NO SPECIAL ATTENTION
OR MEASUREMENT


NO ADDITION OF DANGEROUS CHEMICALS

ARE PURIFIED FOR EACH PENNY OF OPERATING COST

> DESTROYS FECAL COLIFORM



#### WASTEWATER DISINFECTOR

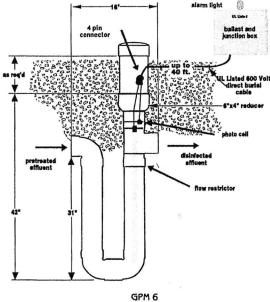

GPM 6
ULTRAVIOLET DISINFECTOR
UV "The Disinfector", Inc.

NOTE: Test performed by a third part testing laboratory following Standard 40 Class I aerobic treatment unit for a six month period with a median concentration of 10 cfu/100 ml.

ALL MICRO-ORGANISMS
ARE SUSCEPTIBLE TO
ULTRAVIOLET
DISINFECTION

NO DANGER OF OVERDOSING

WASTE IS DISINFECTED AS SOON AS IT LEAVES THE UNIT

SIMPLE INSTALLATION AND MAINTENANCE

PROVIDES CONTINUOUS
DISINFECTION

NO CHLORINE CORROSION PROBLEMS



